

Start Configuration



1. 1st Set



All Codes



1



2. Complete



#



2. Complete



End Configuration



Save Parameters



Taal:

Start Configuration



French



German



End Configuration



Save Parameters



Start Configuration



6.5 Buzzer Beep Tone

<High>



Medium



Low



Off



End Configuration



Save Parameters

