

 
## **USB Country Keyboard Types (Country Codes)**

Scan the bar code corresponding to your keyboard type. This setting applies only to the USB HID Keyboard Emulation device.

---

**Note:** *When changing Country Selection, the scanner automatically restarts. The scanner issues the standard startup beep sequences.*


---



**\*North American Standard USB Keyboard**



 **German Windows**



**French Windows**